

GPIO server

Settings

Via the GPIO server all [IOs](#) of Netzer can be addressed.

If the GPIO is activated, Netzer opens a TCP port (factory setting 65000) after restart. Activation and the port can be carried out by general settings via the website (see figure). The settings do not become directly effective, but only after restart!



For simple tests of the server and the protocol every terminal program may be used that is capable of building up connections via Raw TCP sockets, such as e.g. the Windows HyperTerminal.

Upon successful connection establishment, authentication takes place if activated. Otherwise, the protocol phase is directly entered into.

Authentication (from version 1.4 pro)

For the GPIO server, authentication can be activated on the GPIO settings website.

The screenshot shows a settings interface with a dark red background. On the left, there is a navigation menu with sections: SYSTEM STATE, COMMON, GPIO (selected), and SERIAL. Under the GPIO section, there is a sub-section for COMMON. The main content area contains several settings: 'Automatic refresh' with a value of 0 and a note '(0 = disabled)'; 'Radix' set to 'Decimal'; 'Script' checked and labeled 'Active'; and 'Authentication (GPIO Server)' checked and labeled 'Active', which is circled in red. At the bottom, there are 'Save' and 'Reset' buttons.

For authentication, the user accounts of the [access control](#) are used. The rights of the individual user accounts are replicated as well. The guest login for example can only access to GPIO values in reading.

After connection establishment, the input prompt for the user name is displayed:

```
login:
```

After that, the password:

```
password:
```

In the event of an incorrect entry the connection is interrupted by the GPIO server. If everything is okay, the protocol phase is entered into.

Protocol

In the GPIO server, a simple protocol is implemented.

Thanks to this protocol, digital inputs and outputs as well as ADC and PWM/pulse outputs can be read. Only digital outputs as well as PWM/pulse outputs can be written. Furthermore, these outputs must not be occupied by functions of the serial server.

Reading or writing is done by commands.

Individual commands are separated from each other by Whitespaces (space characters, tab, word wrap etc. - all characters with the ASCII code ≤ 32).

Each pin can be unambiguously addressed via its ID. Here an overview of all IDs:

Name	IO0	IO1	IO2	IO3	IO4	IO5	TX	RX	SPI_CS	SPI_INT	SPI_CLK	SPI_MI	SPI_MO	All pins
ID	a	b	c	d	e	f	g	h	i	j	k	l	m	x

Reading of pins works as follows:

```
a=? Server reply: a=1
e=? Server reply: e=03ff
m=? Server reply: m=0
x=? Server reply: x=0011
```

Depending on whether the pin is configured digital or as ADC/PWM, the GPIO server supplies binary or numerical values. The radix of numerical values can be changed between hexadecimal and decimal using the GPIO setting on the [GPIO configuration page](#).

The wildcard ID **x** always supplies the digital state of all pins, regardless of whether a pin supplies binary or numerical values. At bit level, the states of the individual pins as per the following table are possible:

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	0	0	m	l	k	j	i	h	g	f	e	d	c	b	a


Writing on pins is done analogously:

```
a=1 Server reply: a=1
d=0123 Server reply: d=0123
m=0 Server reply: m=0
x=0123 Server reply: x=0123
```

The wildcard ID **x** describes only the pins configured as digital outputs and not occupied by the serial server.

Events (Version 1.4 pro)

For every digital input, an event trigger may be activated on the GPIO configuration page.

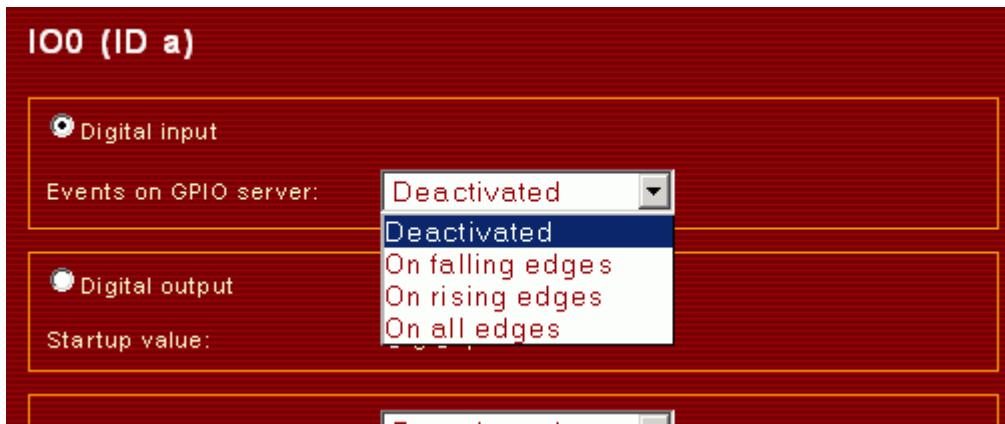

Thus, the GPIO sever independently sends protocol messages in the event of an accordingly configured amendment.

From: <http://mobacon.de/dokuwiki/> - **MoBaCon**

Permanent link: <http://mobacon.de/dokuwiki/doku.php?id=en:netzer:gpioserver&rev=1324367349>

Last update: **2025/06/11 20:42**

