

Startpage Webinterface



The screenshot displays the Startpage Webinterface with a dark red background and a yellow border. The interface shows system information in a text-based format, followed by control buttons.

Firmware version:	IO pro V1.4.201 Oct 30 2011
Bootloader Version:	3
MAC Address:	00-04-A3-2C-3D-9F
IP Address:	192.168.97.5 (DHCP)
Subnet mask:	255.255.255.0
Gateway:	192.168.97.1
Network name:	ne2c3d9f.local
Name service:	Active
HTTP Port:	80
GPIO Server:	Listens on port 65000.
Serial mode:	Deactivated
Serial Server:	Stopped.
Bytes from network:	0
Bytes to network:	0

Below the information, there are four buttons: **Blinking**, **Restart**, **Reset to factory settings**, and **Shut down**.

Buttons

Blink

If there is more than one Netzer in the network, it could be useful to find a single Netzer with the Blink mode.

Both LEDs at the RJ45 socket are toggled in a second interval.

Restart

The Netzer is shut down and restarted afterwards. The bootloader is not activated during this time.

Reset to factory settings

The Netzer is shut down and restarted afterwards. The bootloader is not activated during this time. Right after the restart all settings are reset to [factory settings](#).

Shut down

The Netzer is shutdown and enters power down resp. sleep mode. Also in this mode Netzer consumes power, but not as much like in normal mode. An impulse at the reset pin wakes Netzer up.

From:

<http://www.mobacon.de/wiki/> - MoBaCon Wiki

Permanent link:

<http://www.mobacon.de/wiki/doku.php/en/netzer/startpage>

Last update: **2014/02/09 13:32**

