
Impulse handling with Netzer IO

Netzer is able to generate and capture signals at IO3 and SPI_INT.

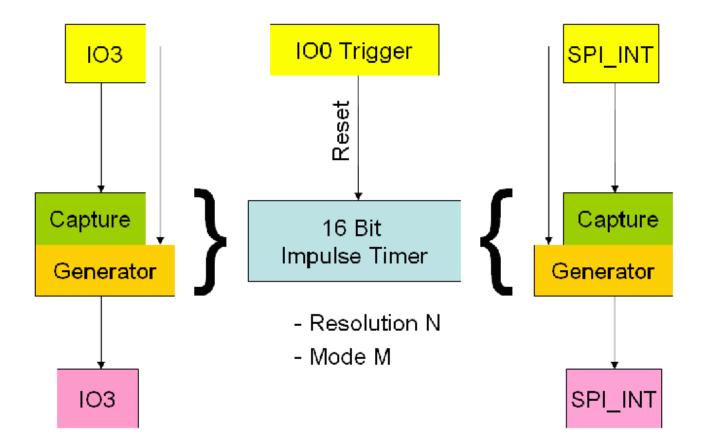

The image shows the structure of the impulse generator/capture.

The impulse module is divided into two modes, the unsynchronized mode and the IOO synchronized mode. Both, IO3 and SPI INT, can either work in unsynchronized or in IOO synchronized mode.

Furthermore a mode M can be configured:

- · Continuous mode
- Single
- Triggered by IO0

Resolution N can be either 100ns, 200ns, 400ns or 800ns. All raw values associated with Capture/Generator module must be multiplied by N to get the final time value.

Last but not least channels can be configured for capturing (measuring impulses) or generating impulses.

Examples

Some of the examples below show both signals IO3 and SPI INT. Of course impulse module can be


configured to use only one of them.

The examples below only show positive logic. Simply invert the signals to get negative logic examples.

In the IO0 examples the IO0 trigger is configured for rising edge. Simply invert the IO0 signal to get falling edge examples.


Generating impulses in continuous mode (Unsynchronized)

The impulse timer is free running in this mode. Changes on IO0 will not reset the impulse timer.

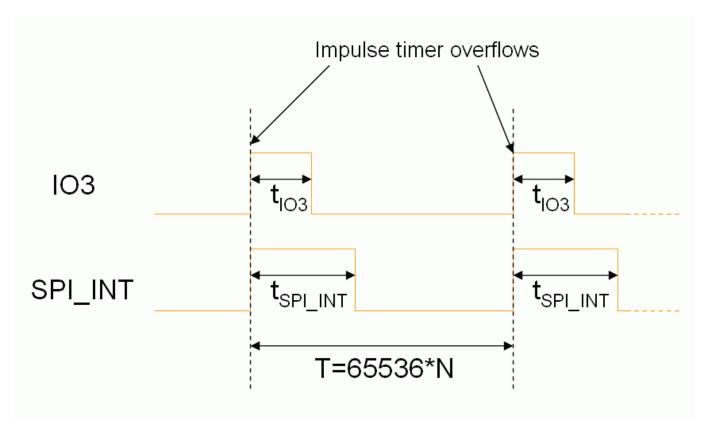

Generating impulses in single mode (Unsynchronized)

The impulse timer is free running in this mode. Changes on IO0 will not reset the impulse timer.

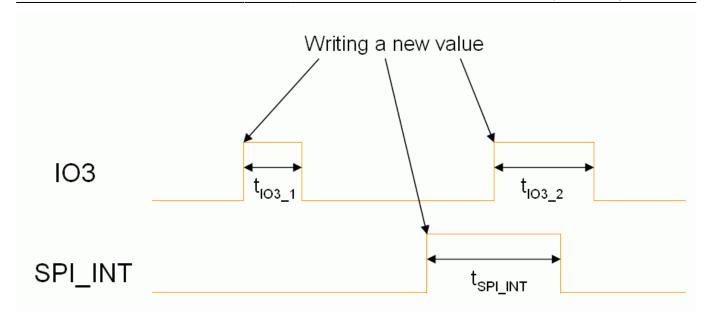


Generating impulses in "Triggered by IOO" mode (Unsynchronized)

This mode shall not be used.


Generating impulses in continuous mode (IO0 synchronized)

This mode shall not be used.


Generating impulses in single mode (IO0 synchronized)

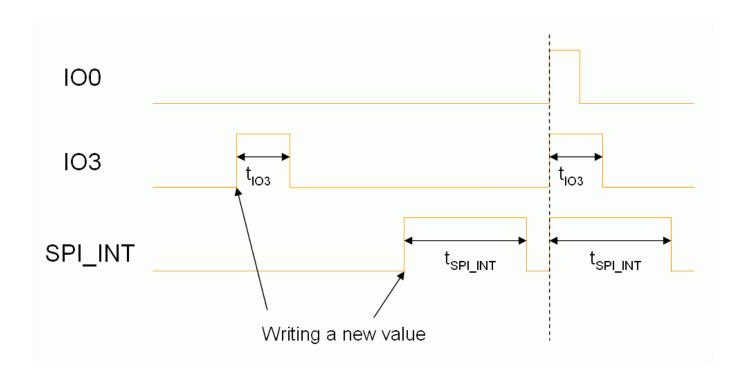

Generating impulses in "Triggered by IO0" mode (IO0 synchronized)

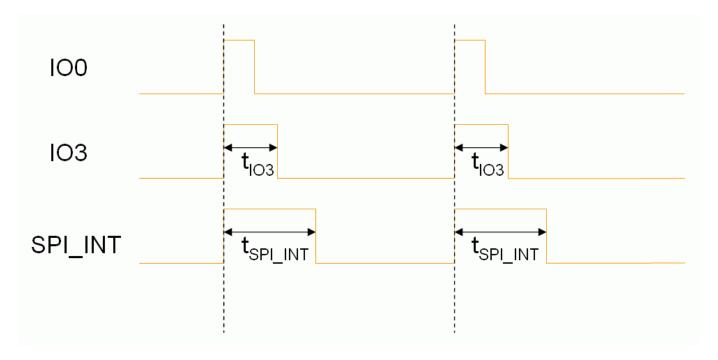


Measuring impulses in continuous mode (Unsynchronized)

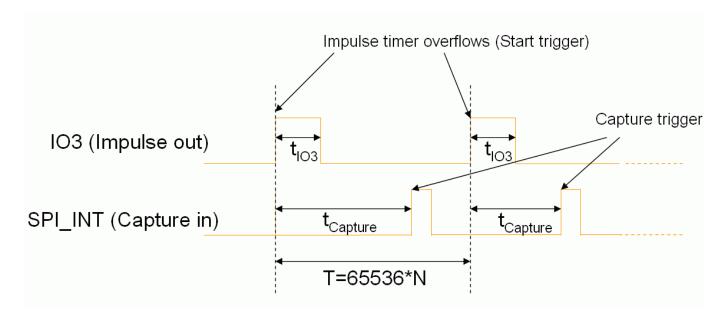

Measuring impulses in single mode (Unsynchronized)

http://mobacon.de/dokuwiki/ Printed on 2025/12/03 19:34

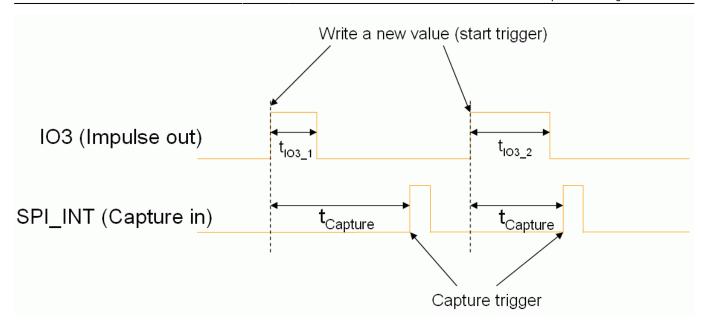


Measuring impulses in "Triggered by IO0" mode (Unsynchronized)

This mode shall not be used.


Measuring impulses in continuous mode (IO0 synchronized)

This mode shall not be used.

Measuring impulses in single mode (IO0 synchronized)

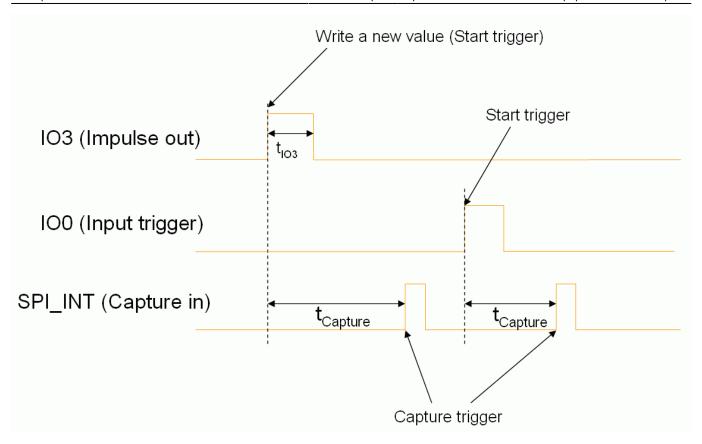

The second example shows the special case of an ultrasonic sensor like HC-SR04. This sensor needs a 10 µs impulse at the TRIG input which shall be connected to IO3. The pulse length of sensor singnal ECHO decodes the distance to the detected object. The signal must be connected to IO0 and SPI_INT. IO0 must be configured for rising trigger edge, SPI_INT for falling capture edge.

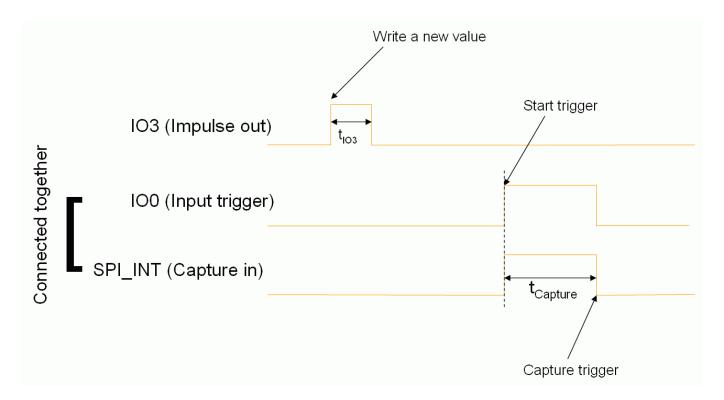


Measuring impulses in "Triggered by IOO" mode (IOO synchronized)

In this mode the periode of periodic signals or pulse length can be measured. Connect the signal to

http://mobacon.de/dokuwiki/ Printed on 2025/12/03 19:34

measure to IOO and IO3 or SPI_INT or both. For period length the IOO trigger edge and the capture edge must be equal (like IO3 in image below). For positive pulses the IOO trigger edge must be rising, the capture edge falling edge (like SPI_INT in image below). For negative pulses the IOO trigger edge must be falling, the capture edge rising edge.

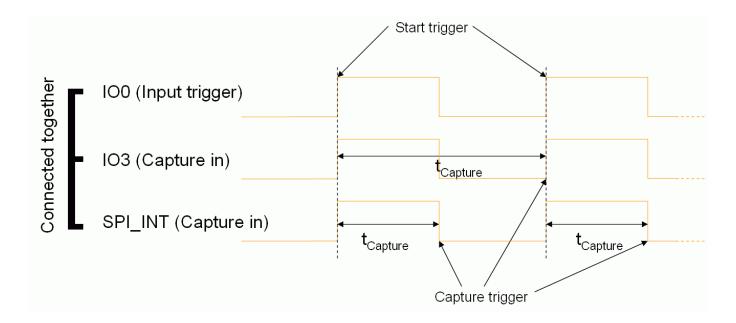

From:

http://mobacon.de/dokuwiki/ - MoBaCon

Permanent link:

http://mobacon.de/dokuwiki/doku.php?id=en:netzer:impulse

Last update: 2025/06/11 20:42

